



NORMAL

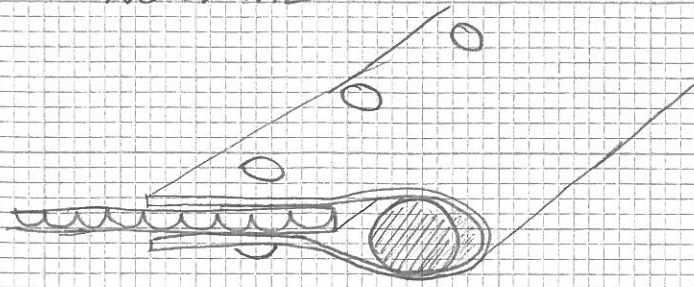

PRESS FIX  
CONNECTOR

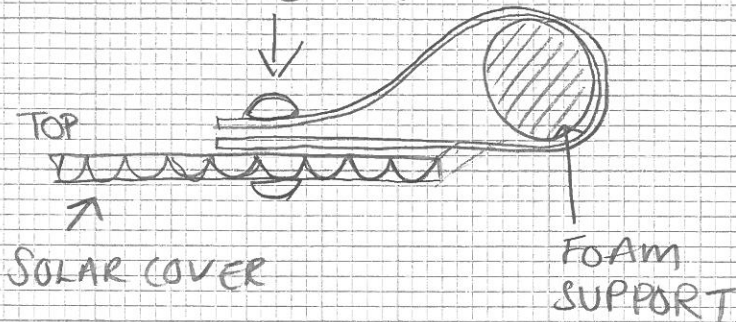

SITS ON TOP OF  
COVER

### LEADING EDGE KIT/TOWKIT WITH ROMAN END

USUALLY THE TOWKIT WOULD FIX ON TOP AND UNDERNEATH THE COVER, BUT YOU CAN'T DO THIS WITH A ROMAN END, SO SIMPLY DOUBLE OVER THE WEBBING ON TOP OF THE COVER.